




Onafis

By My Bacchus



User guide
Update : 26/08/2022






Connection




You can connect to the Onafis platform
from :

Web access

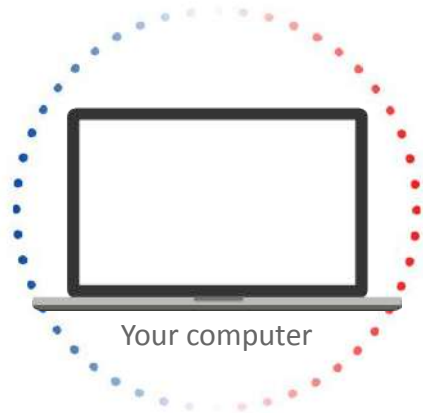

Mobile access

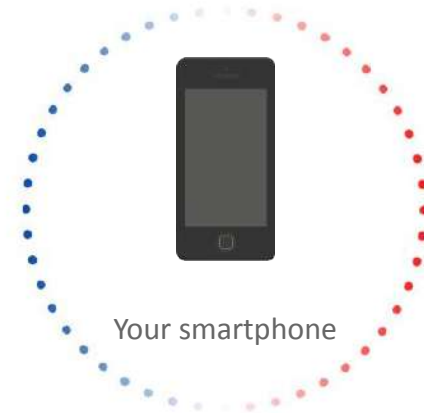





The login address is :

<https://app.chaiconnecte.com>

(If you have any problem, call us)

IOS Shortcut

On IOS, you can create a shortcut on your home screen

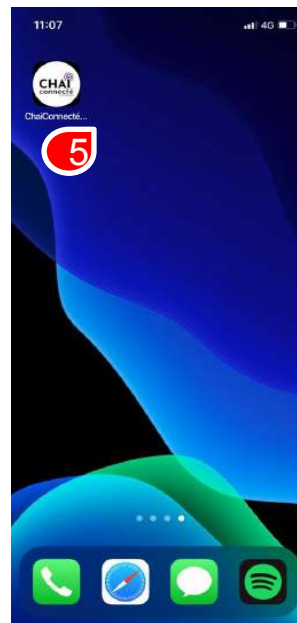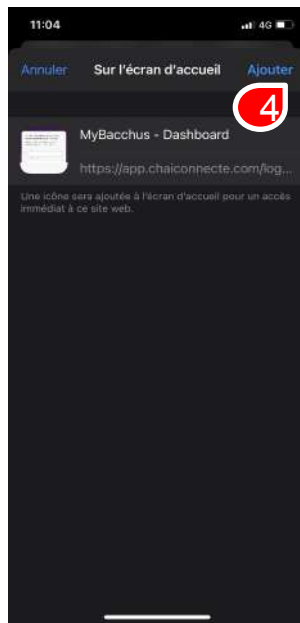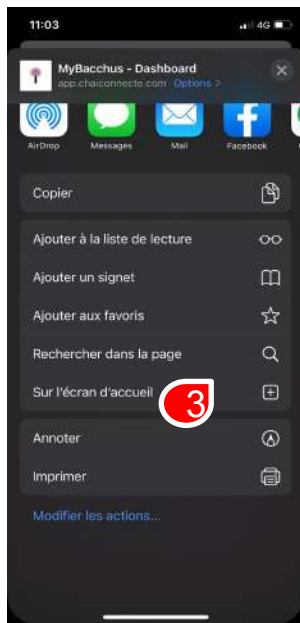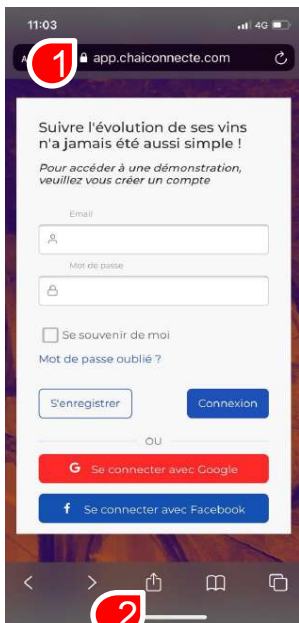

1 Via your browser, go to :
<https://app.chaiconnecte.com>

2 To create the shortcut, click on the download icon

3 Select "On the home screen"

4 Click on « Add »

5 The shortcut appears on your home screen

Android Shortcut

On Android, you can create a shortcut
on your home screen



1 Via your browser, go to :
<https://app.chaiconnecte.com>

2 Click on the three small dots
at the top right of the screen

3 Select "Add on the home
screen"

4 The shortcut appears on your
home screen

Web/IOS Access & Authentication

The screenshot shows the login page for Onafis By My Bacchus. The page features a background pattern of wine glasses and the text "Onafis By My Bacchus". The main content area includes a header with the text "Tracking the evolution of your wines has never been that easy!" and a sub-header "To access a demonstration, please create an account". Below this are input fields for "Email" and "Password", a "Remember me" checkbox, and a "Forgot Password?" link. At the bottom, there is a "Create an account" button, an "OR" separator, and a red "Connect with Google" button. Three red callout boxes with numbers 1, 2, and 3 are overlaid on the page: callout 1 points to the "Forgot Password?" link, callout 2 points to the "Connect with Google" button, and callout 3 points to the "To access a demonstration, please create an account" text.

1 If you forgot your password, click here and enter your email

2 You can sign in with your Google Account

3 You can change the language of the site

Join a domain



Domain access request

Please enter the domain token the owner gave you.

Domain token

adgza54q26d-cqcg1q587-cqsyC5d8q7Z

2

Send

DOMAIN

- Dashboard
- Cellar book
- Wine Makings
- My reports

SCENARIOS

- Running
- History

CELLAR

- Batche

ADMINISTRATION

- Members
- Devices
- Modules

To invite someone, provide the following public token so he can request the access to your domain.

3 Copy domain ID

Domain members

Actions	Name ↑	Email	Role
	Anne-Claire Delhou	anne-claire@onafis.com	Owner
	Utilisateur A	ac1@onafis.com	DevM
	Utilisateur B	ac2@onafis.com	Member
	Utilisateur C	ac3@onafis.com	Manager

1


1 Click on “Join a domain”

2 The Onafis team or a member of your domain must provide you with the domain ID to request access

3 To invite a user, copy the domain ID and validate the invitation once the user has requested access




Your control
panel



Several profiles

Supervisor  **Sees :**
- scenarios - batches - activities - stock management


Member  **Sees, creates and updates :**
- scenarios - batches - activities - stock management

Owner  **It sees, creates, can update and delete :**
- scenarios - batches - activities - stock management
- membres - TH-Dongles

Profiles are established at installation.

Each profile has rights and roles assigned to it, symbolized here by this shape:

Profile 

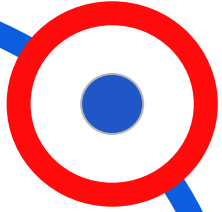

User settings

- Enable notifications
- Notification management
- Change unit
- Onafis menu
- Dashboard



Enable notifications

Utilisateur A

Domain access request

1 User profile

5

2 Edit

Personal information

Firstname / Lastname Utilisateur A

Created at 18/06/22, 15:01

Updated at 23/06/22, 13:35

Last connection 26/06/22, 14:31

Email ac1@onafis.com

Phone +33 7 82 11 45 20


Personal information Notifications Interface

Subscribe to email alerts


3 Subscribe to notification alerts


Subscribe to SMS alerts

4 Save

- 1 Go on your user profile
- 2 Click on « Edit ».
- 3 Go to the Notifications tab. Press to enable or disable. By default, when you create your account, email alerts and notifications are automatically enabled
- 4 Save
- 5 Notifications can be seen on this icon 

Notification management

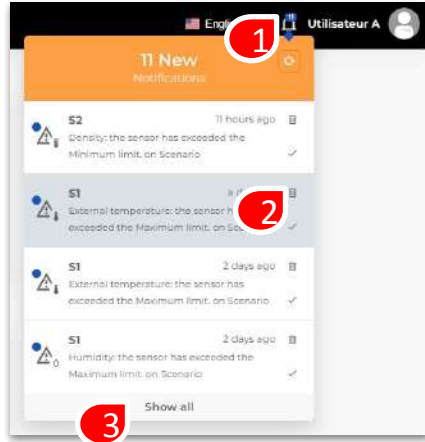

1 Click on the icon  to check for new notifications

2 Delete or mark notifications as "read"

3 Click on "Show all" to see all the notifications received

List of notifications

- 11 hours ago  **EXCEEDING THE THRESHOLD OF A SCENARIO**
August 26, 2022 3:58 AM
Density; the sensor has exceeded the Minimum limit; on Scenario S2
- a day ago  **EXCEEDING THE THRESHOLD OF A SCENARIO**
August 26, 2022 4:32 AM
External temperature; the sensor has exceeded the Maximum limit; on Scenario S1
- 2 days ago  **EXCEEDING THE THRESHOLD OF A SCENARIO**
August 25, 2022 2:38 AM
External temperature; the sensor has exceeded the Maximum limit; on Scenario S1
- 2 days ago  **EXCEEDING THE THRESHOLD OF A SCENARIO**
August 24, 2022 7:58 PM
Humidity; the sensor has exceeded the Maximum limit; on Scenario S1

4 Type of related entity

5   

4 Search for a notification

5

- Mark as read / unread
- Add comment
- Delete

Change unit

1 Accessing unit change from the user profile

2 Select "Interface" tab


3 Choose the unit you wish to use

4 Save your preferences. The page will refresh to save the changes. Exports, notifications, emails, sms and data visualization are automatically adjusted

The screenshot shows a user profile settings page. At the top right, there is a user profile icon with a dropdown menu containing 'Domain access request', 'User profile', and 'Log out'. The 'User profile' option is highlighted. Below this, the 'Interface' tab is selected. The main content area contains a table with columns for 'Measure', 'Unit', and 'Default'. The 'Density' row has 'Degree Brix (°B)' selected in the 'Unit' column. At the bottom right, there are 'Save' and 'View profile' buttons.

Measure	Unit	Default
Density	Degree Brix (°B)	Kilogram per cubic meter (kg/m ³)
Dissolved CO2		Milligram per liter (mg/l)
External temperature		Degree Celsius (°C)
Internal temperature	Degree Fahrenheit (°F)	Degree Celsius (°C)
Level		Centimeter (cm)
Temperature		Degree Celsius (°C)

Onafis menu

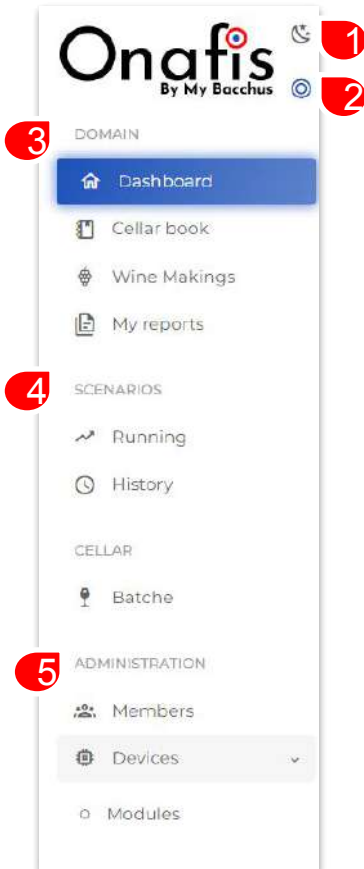

1 Application theme : Dark or Light

2 Collapse and pin the menu

3 Regroups all data related to the domain (measured values, winery activities, reports and documents, etc.)

4 Manage past and current acquisitions

5 Manage users and devices

Dashboard

The dashboard interface includes a top navigation bar with 'English', a help icon, and 'Utilisateur A' with a profile icon. Below are several sections: 'Quick actions' with '2 running scenarios' and 'Start a scenario'; 'Weather' for 'Orvault (Pays de la Loire)' showing '24.0°C - 54.0%' and 'Waning crescent'; 'Microbiological gauge' with a gauge chart; 'Domain environment' with two panels 'M1' and 'M2' showing '3.2°C' and 'Last at acquired at 18/06/22 10:09'; and 'Activity timeline' with an '+ Add activity' button.

1 Manage your personal space administration

2 Access current scenarios

3 Create an activity

4 Access to the cellar environment

5 Start a new scenario

Member / Owner

Scenario

- Batches
- Current scenario
- Sensor parameters
- Scenario view
- Export data
- Multi export
- History
- RDM gauge



Batches

Onafis
By My Bacchus

English Utilisateur A

DOMAIN

Dashboard
Cellar book
Wine Makings
My reports

SCENARIOS

Running
History

CELLAR

Batches

Domain batches

Extract to CSV Create

Actions	Name	Year	Curr...
	Lot 1	2022	0/0
	LI	2022	0/0

1 2 3 4



Before creating a scenario, you must create a batch.

1 View batch

2 Extract data

Member / Owner

3 Edit title, subtitle, year and minimum stock requirement or delete the batch

4 Create a batch

Running scenarios

Onafis
By My Bacchus

DOMAIN

- Dashboard
- Cellar book
- Wine Makings
- My reports

SCENARIOS

- Running
- History

CELLAR

Running scenarios

Multiple actions

Actions	Title	Subtitle	Batche	Probe	Type	Created ...
	S2		Lot 1	B2	Create	16/06/22 18:58
	S1		Lot 1	B1	Evaluation PE	16/06/22 15:53

Create a scenario

Title

Subtitle

Associated batche:

Probe to use for the scenario:

1 Access the scenario tracking

Member / Owner

2 Modify the information of an acquisition

3 Select one or more scenario to :

- modify the limit values or the intervals
- view the graphs
- export
- stop

4 Create a new scenario

Before creating a scenario, you must create a batch.

Sensor parameters

The screenshot shows a web interface for configuring sensors. At the top, there is a dropdown menu for 'Probe to use for the scenario' with the selected option 'Bonde 1 (probe-1609a5cc-d3b0-4f34-b272-7beaff3009f7-5) - Access'. To the right of this menu is a blue 'Create' button. Below the menu is a section titled 'Available sensors' with a 'Use all sensors' toggle switch. Three sensor configuration cards are visible: 'External temperature', 'Humidity', and 'Internal temperature'. Each card has a toggle switch, a 'Scenario interval' dropdown menu, 'Limit values' sliders, and 'Warning thresholds' buttons. A blue line extends from the bottom left of the screenshot.

1 Available sensors

2 Use all sensors

3 Scenario interval


4 Limit values

5 Create

Owner

- 1 List of available sensors
- 2 Check here to use all sensors otherwise deselect
- 3 Drop-down menu to select the measurement interval
- 4 Pointing to value limits to trigger an alert
- 5 Click on "Create"

Scenario view

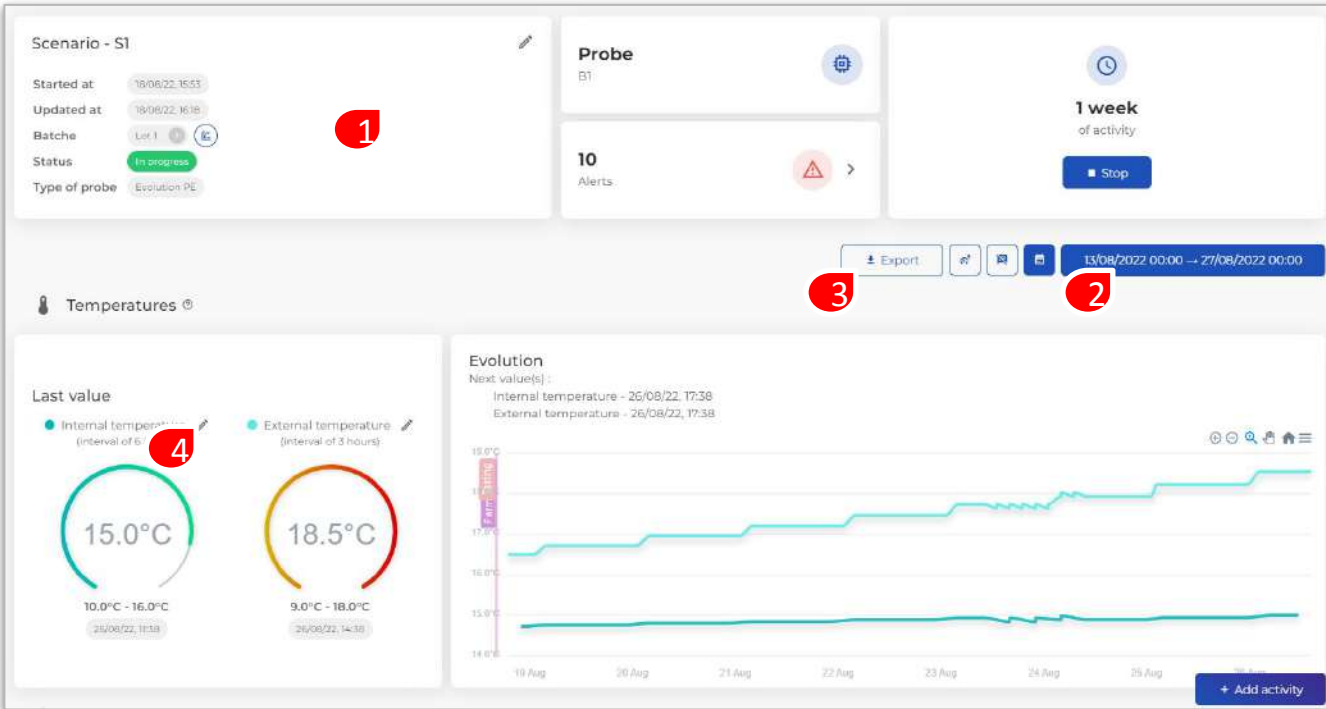

1 Information about the scenario

2 Select the period to be viewed

3 Export data from all sensors for the selected period

Member / Owner

4 Modify the intervals and values via the icon

5 Stop the scenario activity

Export data

1 Export all data from a scenario

2 Select the period to export

3 Possibility to export in CSV or Excel format, then click on "Export"

4 Click on ≡ to export data from a single sensor in SVG or PNG format

Multi export

Onafis
By My Bacchus

- DOMAIN
 - Dashboard
 - Cellar book
 - Wine Makings
 - My reports
- SCENARIOS
 - Running**
 - History
- CELLAR
 - Batche
- ADMINISTRATION
 - Members
 - Devices
 - Modules

Running scenarios

Actions	Title	Subtitle	Batche	Probe	Type	Created ...
<input checked="" type="checkbox"/>	S2		Lot 1	B2	Genesis	18/08/22, 11:58
<input checked="" type="checkbox"/>	S1		Lot 1	B1	Evolution PE	18/08/22, 15:33

Export OK Create

1

2

3

4

Export

Copyright ©2022 MyBacchus

Hand-crafted & Made with ❤️

1 Select the scenarios to export

2 Choose "Export" then click on "OK"

3 Select the export period

4 Possibility to export in CSV or Excel format, then click on the "Export" button

History

A view on stopped scenario is always available in "History"

Actions	Title	Subtitle	Batche	Probe	Type	Created at	Stopped ...
	D�mo		Lot 1	Densios ex	Densios	23/09/22, 17:54	23/09/22, 17:59
	S1		Lot 1	Densios 1	Densios	17/09/22, 19:10	18/09/22, 15:40


1 Follow-up of the stopped scenario

Owner

2 Delete from history


Risk of microbiological departure gauge

For use this option, you must have a probe Evolution

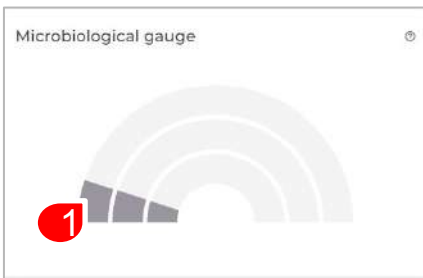


- 1 - From the dashboard: average risk per batch
- From the scenario : indicates the actual risk

- 2 Access to risk parameters

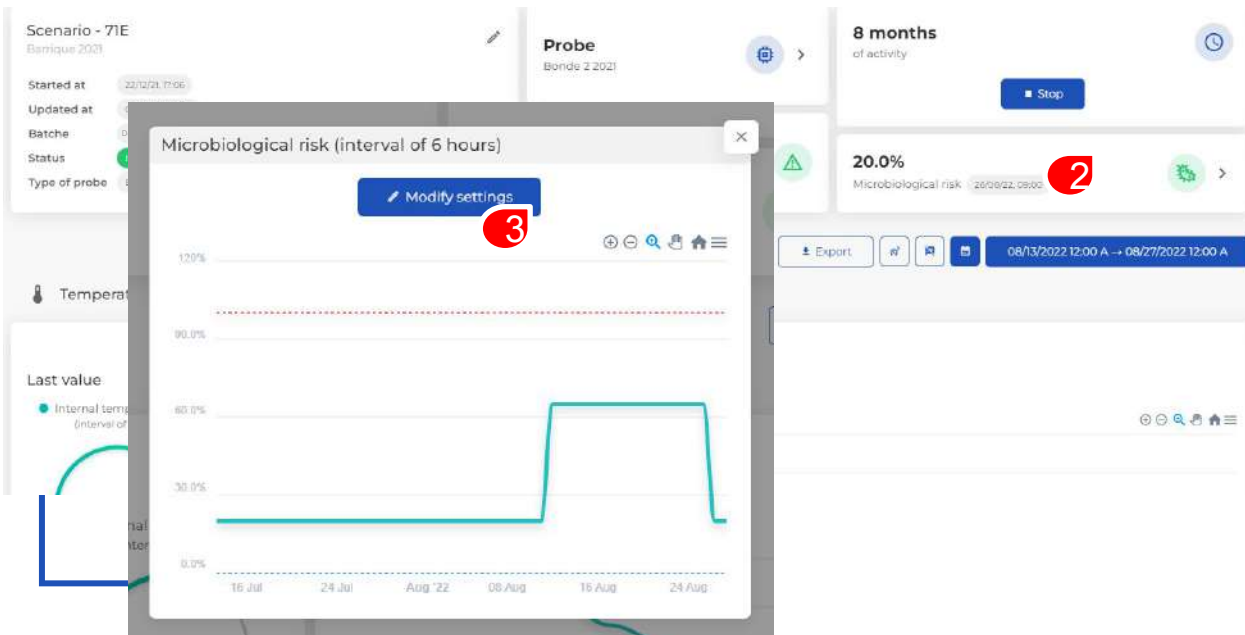

- 3 Modify the parameters
- The scenario interval cannot be modified
- Calibrate the limit values and the sensor
- Add a limit value

Member / Owner

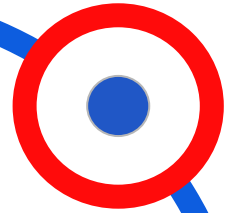


Wine makings

- With a Densios
- With manual data



Wine making with a Densios

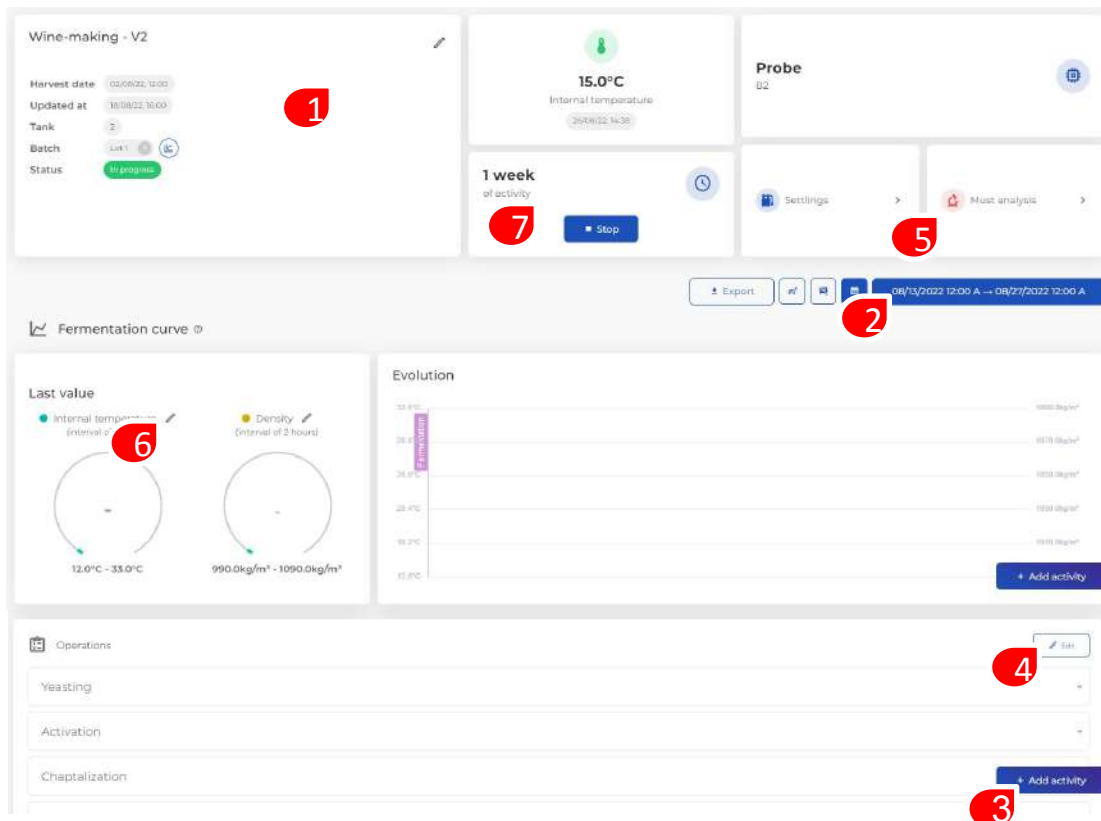

1 Wine making informations

2 Select period to view

3 Add activity

4 Add an operation


Member / Owner

5 Add settings or must analysis

6 Modify the intervals and values via the icons

7 Stop the activity of the Densios

Wine making with manual data

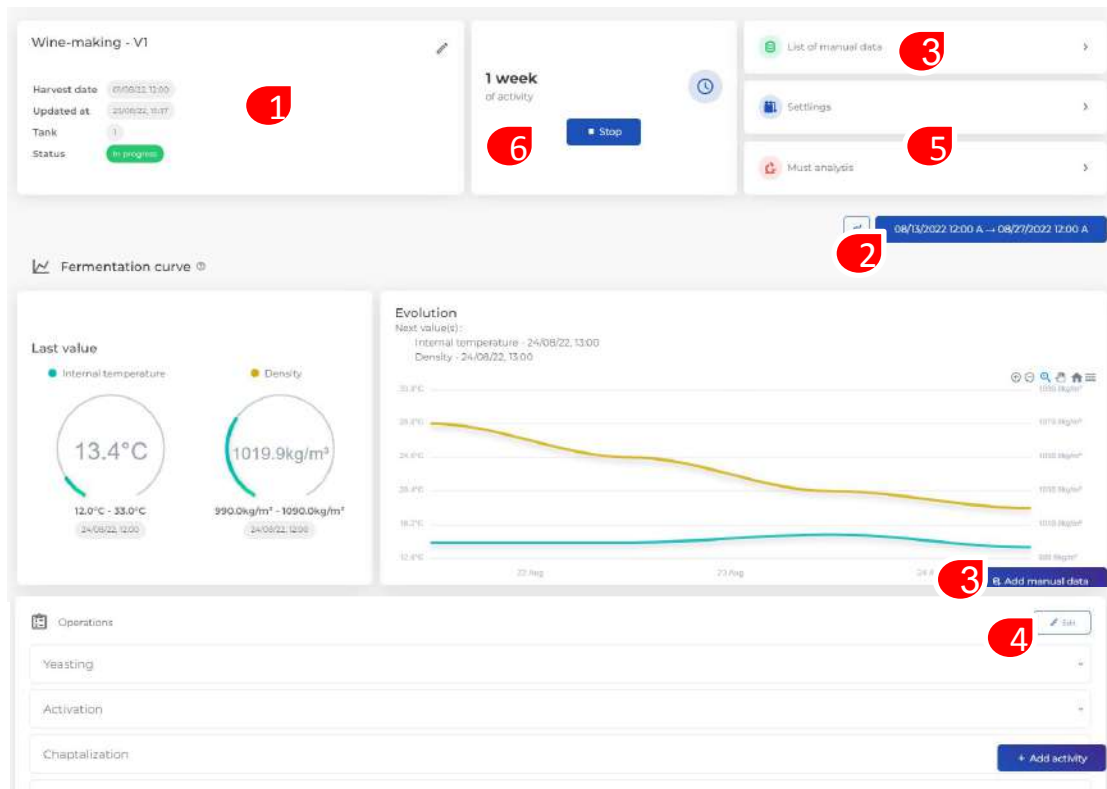

1 Wine making informations

2 Select period to view

3 Add manual data (temperature and density)

4 Add an operation

Membre / Maître de chai

5 Add settings or must analysis

6 Stop the activity of the Densios

Cellar management

- Cellar book : Follow the activities
- View of stock
- My Reports
- Administration - Members
- Administration - Devices - Modules



Cellar book : Follow the activities

The screenshot shows the 'Cellar book' interface with a sidebar on the left containing navigation options like Dashboard, Cellar book, Wine Makings, My reports, SCENARIOS, Running, History, CELLAR, and ADMINISTRATION. The main content area displays a list of activities. The first activity is 'FERMENTATION' by 'Utilisateur A' on August 16, 2022. The second activity is 'TASTING' by 'Utilisateur C' on August 18, 2022. Red callouts are placed over the interface: '1' points to the search filters, '2' points to the activity details, '3' points to the status icons, '4' points to the comment icon, and '5' points to the '+ Add activity' button.

1 Search for an activity

2 See the activity commentary

3 Mark the activity as done or not & Add a comment

4 Edit and delete the activity

5 Create an activity

Member / Owner

View of stock

The screenshot shows a web interface for stock management. At the top right, there is a summary box for a specific batch, labeled '1101' with 'stock units' and an 'Add batche' button. Below this is a table titled 'Batches' with columns for 'Actions', 'Title', 'Code', and 'Stock'. The table lists six items: 'Carton 6 Btl's', 'Caisse plastique', 'Capsule CRD', 'Capsules CN', 'Bouchon Diam', and 'Carton 12 btl's'. Each row has icons for editing, deleting, and adding. A pagination control at the bottom right shows '1' of 1 items. A blue L-shaped line is drawn at the bottom left of the page.

Actions	Title	Code	Stock
	Carton 6 Btl's	6A19506990036	150
	Caisse plastique	EANI2314	10
	Capsule CRD	7Bezzet	141
	Capsules CN	9A00588015668	150
	Bouchon Diam	9A005880156877	600
	Carton 12 btl's	9A00588015667	50

Copyright ©2022 MyBacchus, All rights Reserved

Hand-crafted & Made with

- 1 List of existing batches
- 2 Overall inventory of the associated batch

Member / Owner

- 3 Edit the batch
- 4 Manage the stock by clicking on the box
- 5 Stock creation at the top of the page

My Reports

Onafis
By My Rochus

English Utilisateur A

My reports

Type of related entity Search

08-2022 Rapport bimestriel Ch Anne-Claire-Ona...

PDF

Creation date: 26/04/22
Type: PDF
Description: Rapport du 02 Juin au 02 Juin 2022
Creator: L'equipe Chai Connecte

Download

1 Searching for a document

2 View and download Onafis reports and other documents

Administration - Members

DOMAIN

- Dashboard
- Cellar book
- Wine Makings
- My reports

SCENARIO

- Running
- History

CELLAR

- Batche

ADMINISTRATION

- Members
- Devices
- Modules

To invite someone, provide the following public token so he can request the access to your domain:

Copy domain ID

Domain members

Actions	Name	Email	Role
	Anno-Clair Dehoux	anno-claire@onafis.com	Owner
	Utilisateur A	ac1@onafis.com	Owner
	Utilisateur B	ac2@onafis.com	Member
	Utilisateur C	ac3@onafis.com	Manager

Owner

- 1 list of current members
- 2 Copy and send the domain ID to member who want to join it
- 3 Remove a member from your domain
- 4 Change a domain member's role

Administration - Devices - Modules

Onafis
By MyBacchus

English Utilisateur A

DOMAIN

- Dashboard
- Cellar book
- Wine Making
- My reports

SCENARIOS

- Running
- History

CELLAR

- Batche

ADMINISTRATION

- Members
- Devices
- Modules

Domain modules

Add a Dongle

Actions	Name ↑	Type
<input type="checkbox"/>	M1	Manager
<input type="checkbox"/>	M2	Manager

Copyright ©2022 MyBacchus. All rights Reserved. Hand-crafted & Made with



- 1 View the module activity
- 2 Edit the module
- 3 Add a dongle with the serial number



Onafis

By My Bacchus

02 52 88 00 07

contact@onafis.com



www.onafis.com